



PERINTAH SUARA GLOBAL

Perintah suara global dapat diucapkan dimana saja dalam sistem. Gunakan perintah suara tersebut untuk berpindah antara fungsi komunikasi, hiburan, dan navigasi dengan mudah atau untuk mendapatkan bantuan umum dalam menggunakan sistem.

Cancel
Go back
[Go to] (home [screen] | main menu)
Next
Previous
Play | resume
Pause | stop
[Turn] (display | screen) off
Clock display
Tutorial
Page down
Page up
Help
Line <linenumber>
[Go to] communication | [go to | show] message | messages
[Go to | show] (messages | notifications)
Entertainment
[Go to] navigation
[Go to] settings
[Go to | show] contacts | [go to | show] phonebook
[Go to | dial] phone
([Go to | show] [call] history) | ([go to | show] recent calls)
[Go to] text | [go to] SMS
[Go to | play] Aha [radio]
[Go to | play] AM [radio]
([Go to | play] line in) | ([go to | play] auxillary) | ([go to | play] AUX)
[Go to | play] Bluetooth [audio]
([Go to | play] CD [player]) | ([go to] compact disc)
[Go to | play] FM [radio]
[Go to | play] Stitcher
[Go to] applications
[Go to | play] USB [audio]
[Go to | play] USB 1
[Go to | play] USB 2

Dial pad
Call | dial
(Call | dial) [by] number
(Call | dial) [by] name
(Call | dial) <phoneNumber>
Call <contactName> [<phoneType>]
Call back
Redial
Browse [playlist] <playlistName>
Browse [artist] <artistName>
Browse [album] <albumName>
Browse [genre] <genreName>
Browse [folder] <folderName>
Browse
Browse song
Browse playlist
Browse artist
Browse album
Browse genre
Browse folder
Play song
Play playlist
Play artist
Play album
Play genre
Play audiobooks
Play podcasts
Play folder
Play [playlist] <playlistName>
Play [artist] <artistName>
Play [album] <albumName>
Play [genre] <genreName>
Play folder <folderName>
Address | navigate to [an] address | [enter | drive to] new address
(Clear | cancel) route
(Tune to | station) [AM | FM] <stationFrequencyAM> [AM | FM]
Tune to <satChannelNumber>