



คำสั่งเสียงที่ใช้กันทั่วไป ใช้พูดได้ทุก ๆ ที่ในระบบใช้งานเพื่อใช้งานอย่างง่าย ๆ ระหว่าง การติดต่อสื่อสาร, ความบันเทิง และระบบนำทาง หรือ ขอความช่วยเหลือต่าง ๆ

Cancel
Go back
[Go to] (home [screen] | main menu)
Next
Previous
Play | resume
Pause | stop
[Turn] (display | screen) off
Clock display
Tutorial
Page down
Page up
Help
Line <linenumber>
[Go to] communication | [go to | show] message | messages
[Go to | show] (messages | notifications)
Entertainment
[Go to] navigation
[Go to] settings
[Go to | show] contacts | [go to | show] phonebook
[Go to | dial] phone
([Go to | show] [call] history) | ([go to | show] recent calls)
[Go to] text | [go to] SMS
[Go to | play] Aha [radio]
[Go to | play] AM [radio]
([Go to | play] line in) | ([go to | play] auxillary) | ([go to | play] AUX)
[Go to | play] Bluetooth [audio]
([Go to | play] CD [player]) | ([go to] compact disc)
[Go to | play] FM [radio]
[Go to | play] Stitcher
[Go to] applications
[Go to | play] USB [audio]
[Go to | play] USB 1
[Go to | play] USB 2

Dial pad
Call | dial
(Call | dial) [by] number
(Call | dial) [by] name
(Call | dial) <phoneNumber>
Call <contactName> [<phoneType>]
Call back
Redial
Browse [playlist] <playlistName>
Browse [artist] <artistName>
Browse [album] <albumName>
Browse [genre] <genreName>
Browse [folder] <folderName>
Browse
Browse song
Browse playlist
Browse artist
Browse album
Browse genre
Browse folder
Play song
Play playlist
Play artist
Play album
Play genre
Play audiobooks
Play podcasts
Play folder
Play [playlist] <playlistName>
Play [artist] <artistName>
Play [album] <albumName>
Play [genre] <genreName>
Play folder <folderName>
Address | navigate to [an] address | [enter | drive to] new address
(Clear | cancel) route
(Tune to | station) [AM | FM] <stationFrequencyAM> [AM | FM]
Tune to <satChannelNumber>